



Commercial electric style salamander Instruction Manual

FSESD-0603



Shinelong International Co., Ltd

Web: <http://www.furnotel.cn>

E-mail: info@furnotel.cn

Fax: +86 20-34709972

TEL: +86 20-34709971

Address: 301, Building 1, Tian An Hi-tech Ecological
Park Panyu Avenue Panyu, Guangzhou, China

The FSESD-0603 is our latest generation kitchen equipment. They are fully-featured, easy to operate, energy saving and are designed for environmental protection.


Thank you for choosing our kitchenware series. Please read the manual book carefully before using the equipment and use only as specified.

1.Function:

(1)For toast the fresh bread and the frozen bread.

(2)For dry and toast the fresh and frozen meat.


2.Struction of the production:

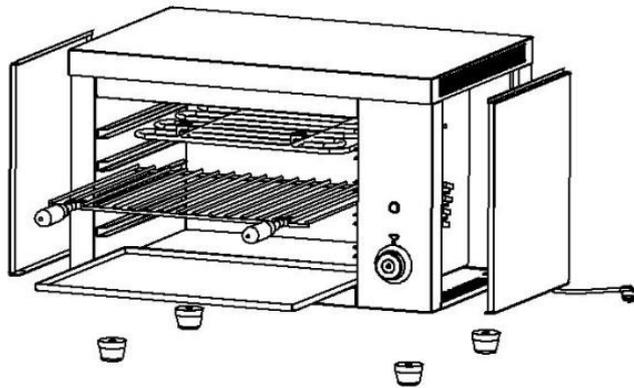

3. Parameter

Name	Commercial electric style salamander
Model	FSESD-0603
Voltage	220V 50HZ
Power	2 KW
Temperature range	50°C~250°C
Dimension (mm)	570*340*260MM

4.Circuit diagram:

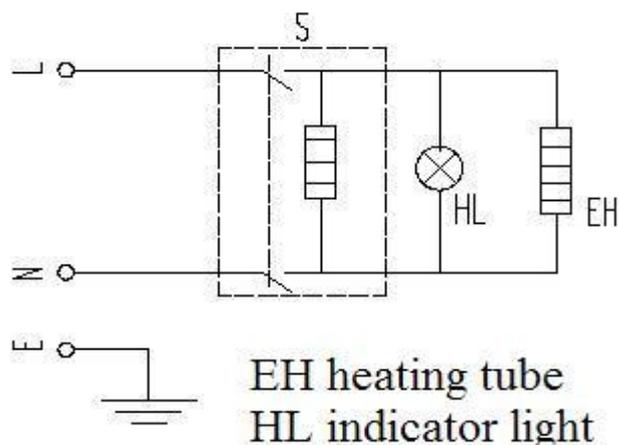

5.Operation instruction:

(1)Connect to the power, the green indicator light turn on ,Rotate the knob clockwise, the temperature will rise. This time the heating indicator light will turn on and the heating tube works. When the temperature reaches the one you have set, the heating tube will turn off. When the temperature decreases, it will start to work again. So it will keep in a constant temperature.

(2)This equipment has some shelf bracket; you can adjust the shelf height according the condition of food to cook the satisfied food.

6.Attention for installation:

- a. Put the equipment on level ground and ensure a clearance of at least 10cm from both right and left side, and at least 20cm from behind.
- b. The working voltage must match the one on the specification plate.
- c. Install the allowable power source; fuse plug and grounding protection to the equipment. Do not put anything in front of the power switch.
- d. The power connection is under the equipment in the rear corner and connects to ground for safety.
- e. The ground wire (yellow and green wire) and power source wire are in the same wiring harness. Connect the ground wire by suitable copper bolt if the power point doesn't have one.

7. Trouble shooting

Problem	Reason	Solution
---------	--------	----------

<p>The green indicator light is not lit when you turn on the power.</p>	<ol style="list-style-type: none"> 1. The power fuse is burned out. 2.The power wire is improperly Connected. 3. The light has burned out. 	<ol style="list-style-type: none"> 1.Replace with a suitable fuse 2. Tighten the power wire connection. 3. Replace the light.
<p>2. The yellow indicator light is always lit. You cannot control the temperature.</p>	<ol style="list-style-type: none"> 1. The indicator light is improperly connected.. 2. The thermostat has failed. 	<ol style="list-style-type: none"> 1. Connect the light correctly. 2. Replace the thermostat.
<p>3. The yellow indicator light is not on; the temperature can be controlled normally.</p>	<ol style="list-style-type: none"> 1. The indicator light is improperly connected. 2. The indicator light has burned out. 	<ol style="list-style-type: none"> 1. Connect the light correctly. 2. Replace the light.

8.Cleaning and maintain:

1. Turn off the power source after cooking is finished.
2. Do not destroy the surface or heat plate with solid or sharp objects.
3. Clean the salamander at regular intervals; take out the shelf to clean it. Wipe the inside with dry cloth. Do not wash it by water directly.