



Cone baker Instruction Manual FSEMM-0304



Shinelong International Co., Ltd

Web: <http://www.furnotel.cn>

E-mail: info@furnotel.cn

Fax: +86 20-34709972

TEL: +86 20-34709971


Address: 301, Building 1, Tian An Hi-tech Ecological
Park Panyu Avenue Panyu, Guangzhou, China

Thank you for choosing our kitchenware series. Please read the manual book carefully before using the equipment and use only as specified.

Cooking is a culture full of artistry. One of our goals for producing high quality kitchenware is to help you feel the unique satisfaction and enjoyment from cooking.

The FSEMM-0304 is our latest generation kitchen equipment .The body is made from Japanese stainless steel and the smooth appearance is based on European styling. They are fully–featured, easily to operate, energy saving and are designed for environmental protection.

一、 Component Diagram

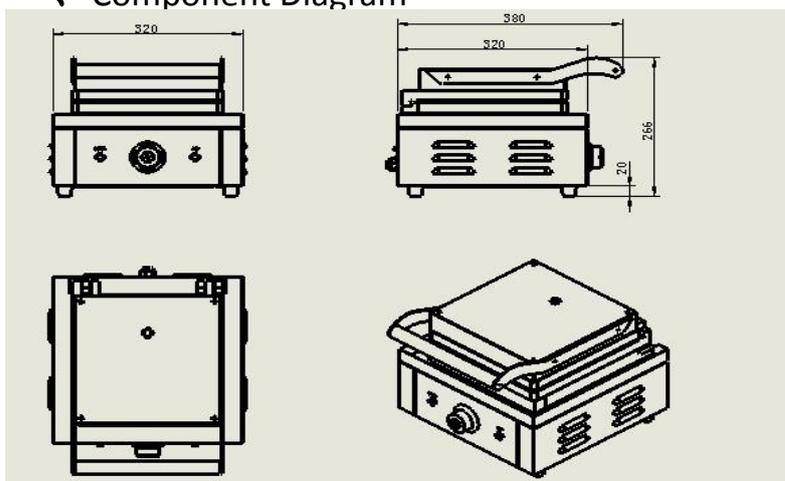

二、 Parameters

| | |
|-------------------|-------------|
| Name | Cone baker |
| Model | FSEMM-0304 |
| Size(mm) | 320*380*266 |
| Power | 230V/50HZ |
| Voltage | 2.2kW |
| Temperature range | 50~300°C |

三、 Operation Instructions

3.1 Safety Instructions

If there is any abnormal appearance while you are using the equipment, turn off the power immediately. Do not use until safety is assured.

3.2 General operation

- A. Turn on the power source and the green power indicator light should come on. Select the desired power level and proceed to cook.
- B. According to your need to choose the suitable temperature. The temperature range can be adjusted from 50~300°C.

四、 Installation

- a. Put the stove on level ground and ensure a clearance of at least 10cm from both right and left side, and at least 20cm from behind.
- b. The working voltage must match the one on the specification plate.
- c. Install the allowable power source; fuse plug and grounding protection to the equipment. Do not put anything in front of the power switch.
- d. The power connection is under the stove in the rear corner and connects to ground for safety.
- e. The ground wire (yellow and green wire) and power source wire are in the same wiring harness. Connect the ground wire by suitable copper bolt if the power point doesn't have one.

Attention

A. In order to prevent destruction from thunder, turn off power as soon as possible while the thunder is closing in.

B. Do not destroy the surface or heat plate with solid or sharp objects.

C. Turn off the power source after cooking is finished.

五、Trouble shooting

| Problem | Reason | Solution |
|-----------------------------------|--|--|
| 1、Power light (Green) is not lit | ①The power fuse is burned out. ② Thepower wire is improperlyconnected. ③The light has burned out | 1.Replace with a suitable fuse 2. Tighten the power wire connection. 3. Replace the light. |
| 2、Power light (Yellow) is not lit | ① The light is not available ② The circuit is not connected | Change the power light, Make sure the circuit is connected |
| 3. The heater is not available | ①The heater is burned out ③ Temperature controller is not available | Change heater Change temperature controller |