


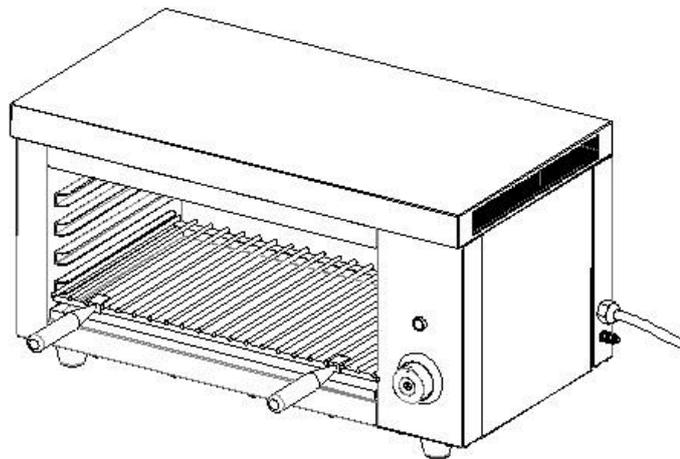

Counter Top Electric Salamander

Instruction Manual

FSESD-0603 FSESD-0604 FSESD-0805



Shinelong International Co., Ltd

Web: <http://www.furnotel.cn>

E-mail: info@furnotel.cn

Fax: +86 20-34709972

TEL: +86 20-34709971

Address: 301, Building 1, Tian An Hi-tech Ecological
Park Panyu Avenue Panyu, Guangzhou, China


Counter Top Electric Salamander is the latest electric heating product developed by our factory. The whole structure is safe, reasonable, easy to operate, small in size and beautiful in appearance. In order to make full use of this product and reduce unnecessary loss and damage, please read this instruction carefully before use.

一、 Purpose

1.This product treats all fresh and frozen bread and flour products in the sun.

2.All fresh and frozen meat products are baked.

二、 Product Mix

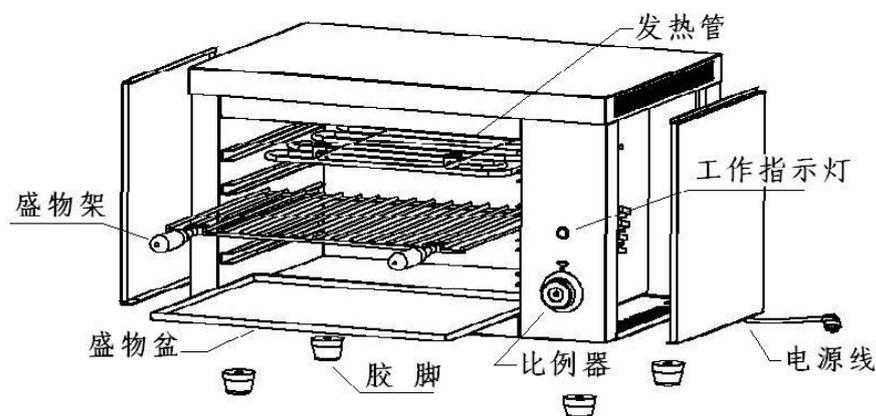


盛物架-----shelf 盛物盆-----Pot of things 胶脚-----Rubber feet
 比例器-----Proportional device 电源线-----Power cord
 工作指示灯-----Work light 发热管-----Heating tube

三、 Basic Parameter

Name	Counter Top Electric Salamander		
Model	FSESD-0603	FSESD-0604	FSESD-0805
Voltage	220-240V~/50Hz		
Power	2 kW	3.6 kW	2.2 kW
Temperature range	50°C~250°C		
Dimension (mm)	570*310 *310	580*390*390	800*450*470

四、1.FESD-0603、FESD-0604Circuit Diagram

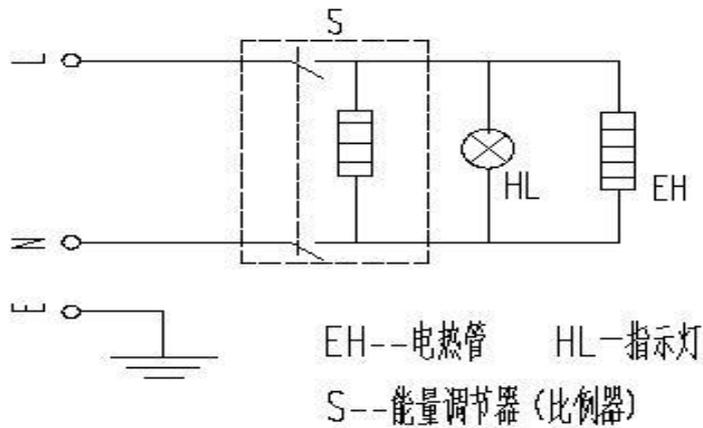


EH-----Electrothermal tube

HL-----Indicator light

S-----Energy regulator(Proportional device)

2.FESD-0805Circuit Diagram

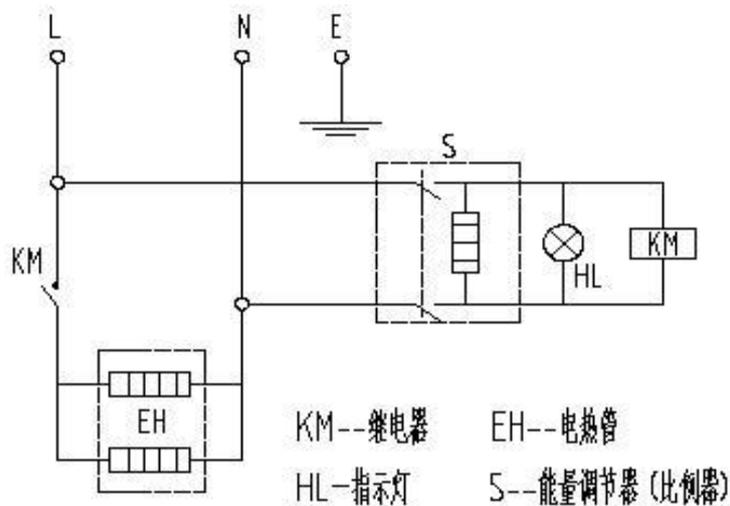

KM-----Relay

EH-----Electrothermal tube

HL-----Indicator light


S-----Energy regulator(Proportional device)

五、 Operation Instructions

1. Turn on the power, the green indicator light, clockwise rotation of the proportional device (rotation angle is greater, the furnace temperature is higher). The heating indicator light, the electric heating tube to work,

when the temperature rise to the required temperature, the proportion of the device will automatically cut off the power supply, and the heating indication lamp, electric heating tube stops working, when the furnace temperature is decreased, and the proportion of auto power on heating, this repeated cycle, to ensure that the temperature in the range of set value constant.

2.As shown, turn the knob to the A position, and the electric heating tube is continuously heated.

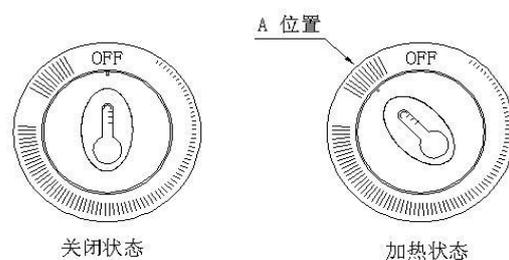

关闭状态-----Closing state

加热状态-----Heating state

3.This device is provided with a containing frame and a tray two attachments, when in use, according to the food to adjust the size of the containing frame and plate position, it will produce a satisfactory food.

六、 Installation Notes

1.The furnace should be placed in a smooth place, left and right side of the non combustible items above 10CM, desktop use should be non flammable (such as brick wall) 20CM above.

2.The power supply voltage must be in line with the power supply voltage of the nameplate.

3.The user shall install suitable power switches, fuses and electric leakage protectors near the equipment. No sundries can be piled in front of the switch, so it is easy to operate.

4.The equipotential connection terminals of the equipment are located behind the furnace, and the ground shall be grounded according to the standard requirements to ensure the safety and reliable connection.

5.The ground wire (Huang Lvbian) of the equipment is connected with the power supply, and the ground wire is reliably connected with the copper bolt which is in accordance with the safety performance of the earth wire.

6.Before starting, check all the electrical components of the whole machine and make sure the earthing is reliable.

七、 General Troubleshooting

Problem	Reason	Solution
1.When the power is on, the indicator light does not turn on	1.Power switch fuse fuse 2.Bad contact of power line	1.Replace the fuse 2.Fasten the power cord
2.Green indicator light does not go out, furnace temperature rise shall not be controlled	1.proportioner damage	1.Replacement proportioner
3.The light is not normal and the furnace temperature is normal	1.Poor contact of the indicator light 2.Indicator burned out	1.Fastening connection 2.Replace the indicator light

The above failure items are for reference only. If any faults occur, they shall be stopped immediately and shall be notified to the technical personnel for inspection and maintenance as soon as possible!

八、Transportation and storage

During the course of transportation, severe shock and collision should be avoided. When not in use for a long time, it should be stored in a well ventilated, air dry and non corrosive gas warehouse. Rainproof and corrosion prevention measures should be adopted for temporary storage.

九、Cleaning and maintenance

1. In cleaning and maintenance, the power shall be cut off before the furnace is cooled.

2. After the daily work, the wet towel with no corrosive detergent can be used to clean the surface of the furnace body and the outlet line of the power supply. Water is not allowed to be washed directly so as not to damage the electrical performance.

3. Regularly (every week) to clean the furnace, the containing frame and plate removed from inside the chamber and bore cleaning, application of dry cloth to wipe dry, clean and dry wet cloth, it is strictly prohibited to wash.

Random Enclosure:

A copy of the instruction manual

A shelf

A basin



The product must be safely earthed before use!

In the working process of this machine, it is strictly forbidden to touch the outer shell to prevent scald!

Clean the furnace body and the surface of the furnace directly when cleaning!

This machine shell must be earthed to ensure safety. Thank you for your cooperation!